

FAT-Rails TONE CHART

<i>NOTCH NAME (across-tone knob)</i>	<i>Normal (10)</i>	<i>Neck on with Bridge (9)</i>	<i>Bridge out of phase/ in series with Neck (8)</i>
(1) neck	n	n	n
(2) middle+neck	m+n	m+n	m+n
(3) middle	m	m	m
(4) bridge+middle	b+m	B+N+M	((-B)*N)+M
(5) bridge	b	B+N	(-B)*N

The **FAT-O-Caster** changes the way the pickups are wired into the circuit.

The NAMES of the NOTCHES describe HOW the pickups are wired...

KEY:

+ = wired parallel

* = wired in series

lower case letters = "stock" strat tones

UPPER CASE BOLD = new FAT-O-Caster tones